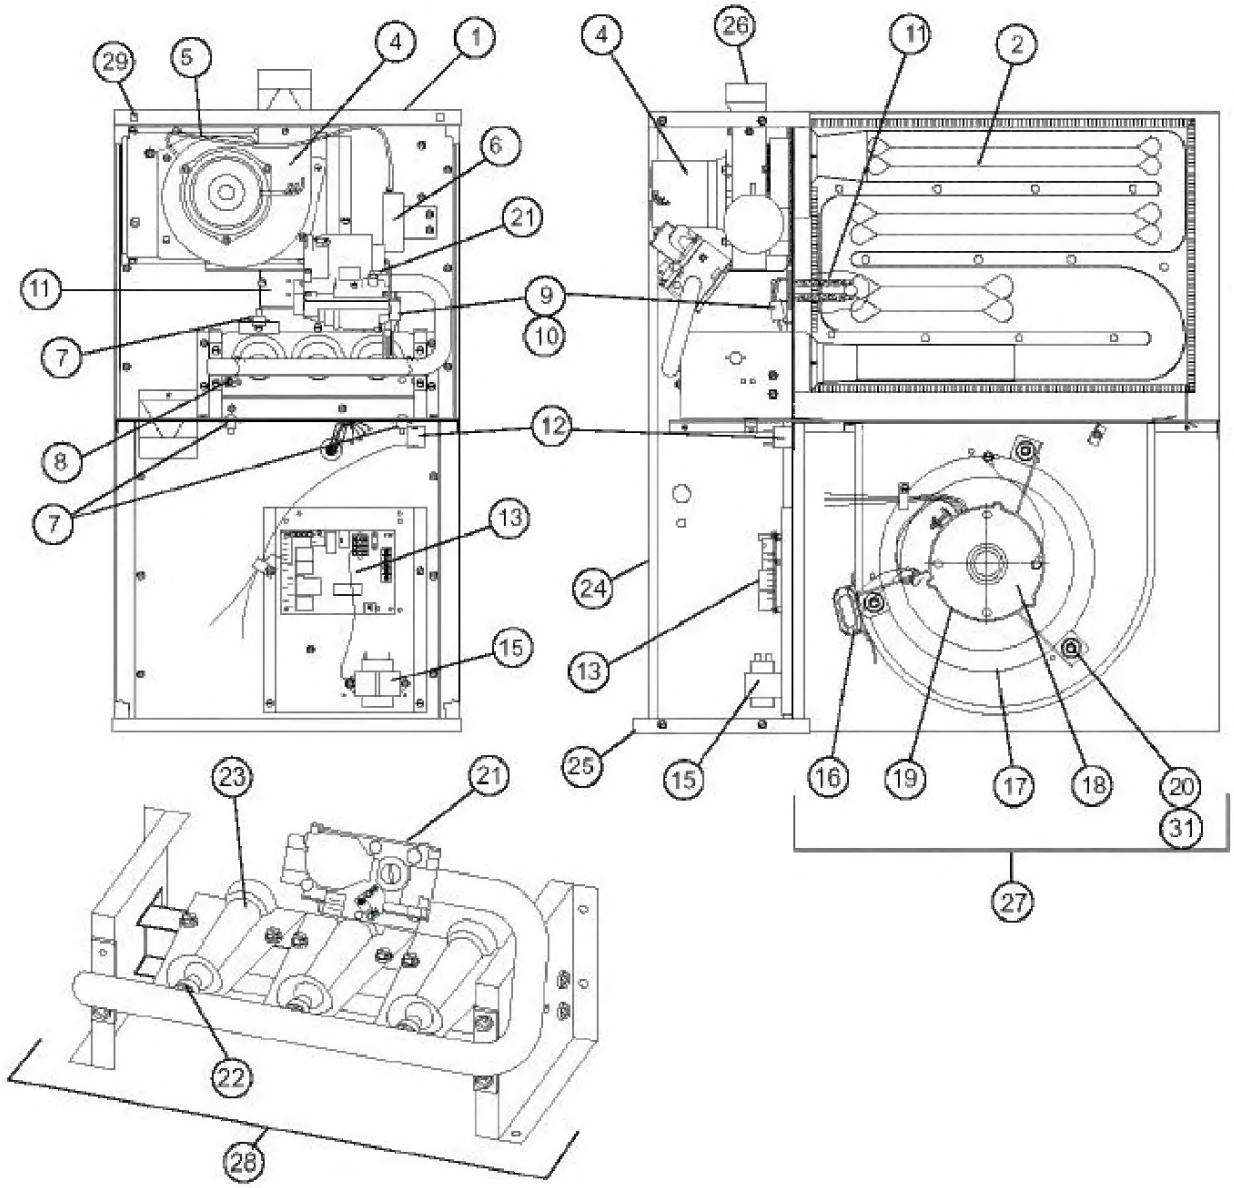

Downloaded from www.Manualslib.com manuals search engine

Models 50, 7512, 7516, 10016

ITEM	DESCRIPTION	GF8050B12MU11A	GF8075B12MU11A	GF8075C16MU11A	GF8100C16MU11A
		2 BURNER	3 BURNER	3 BURNER	4 BURNER
1	Casing, Top Cap	373-19861-041	373-19861-041	073-19861-042	073-19861-042
2	Heat Exchanger Assembly	2702-5031/A	2703-5031/A	2703-5031/A	2704-5031/A
3*	Gasket, Vent Blower	2702-305	2702-305	2702-305	2702-305
4	Blower, Vent	024-34490-000	024-34490-000	024-34490-000	024-34490-000
5	Tube, Pressure	028-12499-000	028-12499-000	028-12499-000	028-12499-000
6	Switch, Pressure	024-35311-000	024-35311-000	024-35311-000	024-35311-000
7	Switch, Roll Out (3 Req'd)	2702-3191	2702-3191	2702-3191	2702-3191
8	Rod, Sensor	2702-311P	2702-311P	2702-311P	2702-311P
9	Ignitor	025-32625-000	025-32625-000	025-32625-000	025-32625-000
10	Bracket, Ignitor	2702-1311	2702-1311	2702-1311	2702-1311
11	Switch, Limit (Open 140 Deg.) Switch, Limit (Open 155 Deg.)	--- 2702-315P/A	2702-314P/A ---	--- 2702-315P/A	2702-314P/A ---
12	Switch, Door	024-27640-000	024-27640-000	024-27640-000	024-27640-000
13	Control, Integrated	031-01267-001	031-01267-001	031-01267-001	031-01267-001
14*	Harness, Wire	2802-4711	2802-4711	2804-4711	2804-4711
15	Transformer (40VA)	2940A3541	2940A3541	2940A3541	2940A3541
16	Capacitor (7.5MFD, 370V) Capacitor (10MFD, 370V)	024-20045-000 ---	024-20045-000 ---	--- 024-20046-000	--- 024-20046-000
17	Wheel, Blower	026-19654-003	026-19654-003	026-19654-005	026-19654-005
18	Motor, Blower	024-25110-000	024-25110-000	024-27540-000	024-27540-000
19	Mount, 1-PC. Motor	073-19831-001	073-19831-001	073-19831-001	073-19831-001
20	Motor Mounts, Rubber (3 Req'd)	028-14740-000	028-14740-000	028-14740-000	028-14740-000
21	Valve, Gas	025-37426-000	025-37426-000	025-37426-000	025-37426-000
22	Orifice, Gas (Natural-0-2,000 Ft.) Orifice, Gas (LP-0-2,000 Ft.) Orifice, Gas (Natural-High Altitude-2,000-5,000 Ft.) Orifice, Gas (Natural-High Altitude-5,000-7,000 Ft.) Orifice, Gas (LP-High Altitude-2,000-7,000 Ft.)	029-21182-042 029-21182-054 029-21182-043 029-21182-044 029-21182-055	029-21182-042 029-21182-054 029-21182-043 029-21182-044 029-21182-055	029-21182-042 029-21182-054 029-21182-043 029-21182-044 029-21182-055	029-21182-042 029-21182-054 029-21182-043 029-21182-044 029-21182-055
23	Burner	2702-308P	2702-308P	2702-308P	2702-308P
24	Panel, Door	373-19861-051	373-19861-051	373-19861-052	373-19861-052
25	Casing, Bottom Cap	373-19861-031	373-19861-031	373-19861-032	373-19861-032
26	Transition, 3"	2802-306	2802-306	2802-306	2802-306
27	Blower Assembly	373-22099-039	373-22099-039	373-22099-040	373-22099-040
28	Burner Assembly	2802-5201	2803-5201	2803-5201	2804-5201
29	Clip, Door Latch (2 per pkg)	021-31399-000	021-31399-000	021-31399-000	021-31399-000
30*	Diagram, Wiring	035-19993-001	035-19993-001	035-19993-001	035-19993-001
31	Spacer (Ferrule) (3 Req'd)	023-20541-000	023-20541-000	023-20541-000	023-20541-000
32	Wrapper, Casing	073-19861-021	073-19861-021	073-19861-022	073-19861-022
33	Manifold, Gas	029-22240-001	029-22240-002	029-22240-002	029-22240-003
34*	Logo/Bezel Plate Assy	373-23701-004	373-23701-004	373-23701-004	373-23701-004
35*	Blower Housing	373-23900-000	373-23900-000	373-239001000	373-23901-000

NOTE: *Not Shown
New replacement parts shown in **bold** face type at the first printing of parts list dated 10/05.
Major components and suggested stocking items are shown with shaded item number.
"<" Across from row indicates a change in that row.
---- Not applicable to specified model.
All parts with three digit suffix numbers are "Special Order" parts. These parts are subject to factory availability and require extra time for delivery.

Downloaded from www.Manualslib.com manuals search engine

Models 10020, 125, 150

ITEM	DESCRIPTION	GF8100D20MU11A	GF8125D20MU11A	GF8150D20UH11A
		4 BURNER	5 BURNER	6 BURNER
1	Casing, Top Cap	073-19861-043	073-19861-043	073-19861-044
2	Heat Exchanger Assembly	2704-5031/A	2805-5031	2706-5031/A
3*	Gasket, Vent Blower	2702-305	2702-305	2702-305
4	Blower, Vent	024-34490-000	024-34490-000	024-34490-000
5	Tube, Pressure	028-12499-000	028-12499-000	028-12499-000
6	Switch, Pressure	024-35311-000	024-35311-000	024-35311-000
7	Switch, Roll Out (3 Req'd)	2702-3191	2702-3191	2702-3191
8	Rod, Sensor	2702-311P	2702-311P	2702-311P
9	Ignitor	025-32625-000	025-32625-000	025-32625-000
10	Bracket, Ignitor	2702-1311	2702-1311	2702-1311
11	Switch, Limit (Open 175 deg.)	2702-316P/A	2702-316P/A	2702-316P/A
12	Switch, Door	024-27640-000	024-27640-000	024-27640-000
13	Control, Integrated	031-01267-001	031-01267-001	031-01267-001
14*	Harness, Wire	2805-4711	2805-4711	2806-4711
15	Transformer (40VA)	2940A3541	2940A3541	2940A3541
16	Capacitor (15MFD, 370V)	024-20446-000	024-20446-000	024-20446-000
17	Wheel, Blower #See Note Below	1472-2851 1472-2861	1472-2851 1472-2861	1472-2851 1472-2861
18	Motor, Blower	024-34491-000	024-34491-000	024-34491-000
19	Mount Assy, Motor	2705-4181	2705-4181	2705-4181
20	Motor Mounts, Rubber (3 per pkg.)	7670-3551	7670-3551	7670-3551
21	Valve, Gas	025-37426-000	025-37426-000	025-37426-000
22	Orifice, Gas (Natural-0-2,000 Ft.) Orifice, Gas (LP-0-2,000 Ft.) Orifice, Gas (Natural-High Altitude-2,000-5,000 Ft.) Orifice, Gas (Natural-High Altitude-5,000-7,000 Ft.) Orifice, Gas (LP-High Altitude-2,000-7,000 Ft.)	029-21182-042 029-21182-054 029-21182-043 029-21182-044 029-21182-055	029-21182-042 029-21182-054 029-21182-043 029-21182-044 029-21182-055	029-21182-042 029-21182-054 029-21182-043 029-21182-044 029-21182-055
23	Burner	2702-308P	2702-308P	2702-308P
24	Panel, Door	373-19861-053	373-19861-053	373-19861-053
25	Casing, Bottom Cap	373-19861-033	373-19861-033	373-19861-033
26	Transition, 3" Transition, 4"	2802-306 ---	2802-306 ---	--- 2703-3061/A
27	Blower Assembly	373-22099-042	373-22099-042	373-22099-042
28	Burner Assembly	2804-520	2805-520	2806-520
29	Clip, Door Latch (2 per pkg)	021-31399-000	021-31399-000	021-31399-000
30*	Diagram, Wiring	035-19993-001	035-19993-001	035-19993-001
31	Spacer (Ferrule) (3 Req'd)	---	---	---
32	Wrapper, Casing	073-19861-023	073-19861-023	073-19861-023
33	Manifold, Gas	029-22240-003	029-22240-004	029-22241-002
34*	Logo/Bezel Plate Assy	373-23701-004	373-23701-004	373-23701-004
35*	Blower Housing	373-23902-000	373-23902-000	373-23902-000

1

NOTE: *Not Shown
New replacement parts shown in **bold** face type at the first printing of parts list dated 10/05.
Major components and suggested stocking items are shown with shaded item number.
"<" Across from row indicates a change in that row.
--- Not applicable to specified model.
Both Blower Wheels are used on these Models.
All parts with three digit suffix numbers are "Special Order" parts. These parts are subject to factory availability and require extra time for delivery.

Downloaded from www.Manualslib.com manuals search engine

Field Installed Accessories-Non-Electrical		
Part Number	**Description**	**Used With**
1FB0318	Combustible Floor Sub-Base	50, 7512
1FB0319		7516,10016
1FB0320		10020,125
1BR0312	Bottom Filter Rack	50,7512
1BR0316		7516,10016
1BR0320		10020,125,150
1NP0366	Conversion Kit-Natural Gas to LP Gas	All Models
1NP0367	Conversion Kit- Natural Gas to LP Gas- High Altitude	
2802-321P	Vent Pipe Extension	

Field Installed Accessories-Electrical		
Part Number	**Description**	**Used With**
2TC03700124	Twinning Control	All Models
6TH13701024	Thermostat:One-stage Heat, No Fan Switch	All Models
6TH07700124	Thermostat:One-stage Heat and One-stage Cool. Manual changeover.	All Models

TO ORDER AUTHORIZED FACTORY REPLACEMENT PARTS - Contact your Source1 HVAC Parts Distributor or visit our website at **www.Source1Parts.com** for a Distributor and Dealer listing.

Subject to change without notice. Printed in U.S.A.
Copyright © by York International Corp. 2005 All rights reserved.

035-19688-001 Rev. D (1005)
Supersedes: 035-19688-001 Rev. C (0805)

Unitary Products Group
5005 York Drive
Norman OK 73069

Downloaded from www.Manualslib.com manuals search engine